






SIGNATURE SERIES PRODUCT

by
ARTROCK GUITARS INDONESIA
www.artrockguitars.com

jpi signature series
MANUAL BOOK

NOTES :

RV	=	RTYHM VOLUME KNOB (NECK PICKUP)
RT	=	RTYHM TONE KNOB (NECK PICKUP)
TV	=	TREBLE VOLUME KNOB (BRIDGE PICKUP)
TT	=	TREBLE TONE KNOB (BRIDGE PICKUP)
RYTHM	=	TOGGLE IN UPPER POSITION (NECK PICKUP ACTIVES)
MIDDLE	=	TOGGLE IN MIDDLE POSITION (BOTH NECK + BRIDGE PICKUP ACTIVE)
TREBLE	=	TOGGLE IN TREBLE POSITION (BRIDGE PICKUP ACTIVES)

	=	PUSH PULL SWITCH UP
	=	PUSH PULL SWITCH DOWN
	=	NO EFFECT UP OR DOWN

For maximum output selector switch must be in middle position when rhythm tone push pull is up. (Output decreases when selector is in the treble position. Guitar will shut off when selector is in rhythm position.) Rhythm volume potentiometer will not shut off guitar but must be set at 10 for maximum output. Treble volume potentiometer will function as master volume in this position.



TOGGLE POSITION & EFFECT DESCRIPTION

PUSH PULL KNOB POSITION

RV RT TV TT


Selector Switch In Treble Position

1. **Treble Humbucker**
2. **Treble Tap (Screw Coil On)**
3. **Treble Tap (Slug Coil On)**



Selector Switch In Middle Position

4. **Rythm & Treble Humbucker Parallel In Phase**
5. **Rythm & Treble Humbucker Parallel Out Phase**
6. **Rythm & Treble Humbucker Series In Phase**
7. **Rythm & Treble Humbucker Series Out Phase**
8. **Rythm Humbucker - Treble Tap (Screw Coil On) Parallel In Phase**
9. **Rythm Humbucker - Treble Tap (Slug Coil On) Parallel Out Phase**
10. **Rythm Humbucker - Treble Tap (Slug Coil On) Series In Phase**
11. **Rythm Humbucker - Treble Tap (Screw Coil On) Series Out Phase**
12. **Rythm Tap (Slug Coil On) - Treble Humbucker Parallel In Phase**
13. **Rythm Tap (Slug Coil On) - Treble Humbucker Parallel Out Phase**
14. **Rythm Tap (Screw Coil On) - Treble Humbucker Series In Phase**
15. **Rythm Tap (Screw Coil On) - Treble Humbucker Series Out Phase**
16. **Rythm Tap (Slug Coil On) - Treble Tap (Screw Coil On) Parallel In Phase**
17. **Rythm Tap (Slug Coil On) - Treble Tap (Slug Coil On) Parallel Out Phase**
18. **Rythm Tap (Screw Coil On) - Treble Tap (Slug Coil On) Series In Phase**
19. **Rythm Tap (Screw Coil On) - Treble Tap (Screw Coil On) Series Out Phase**

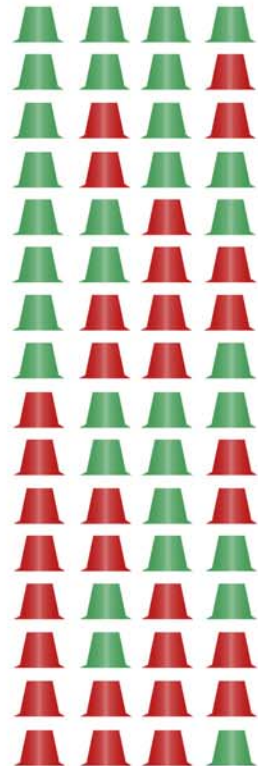

Selector Switch In Rythm Position

20. **Rythm Humbucker**
21. **Rythm Tap (Slug Coil On)**

